



User manual

DELOCK[®]
we move the world

PCMCIA adapter, CardBus to 3 x FireWire



Produkt-Nr.: 61108

Beschreibungs-Nr. 61108-a

www.delock.com



Description

The Delock PCMCIA adapter, CardBus to FireWire expands your notebook by three FireWire ports. You can connect FireWire devices like digital camera, hard disk, DV-Camcorder, CD-RW / DVD-Rom drives, etc. to the adapter.

Specification

- 32-Bit Card Bus type II
- Plug & Play
- 3 x FireWire1394a 6-pin ports
- data transfer rate up to 400 Mbps
- for Windows 98SE/ME/2000/XP, Mac OS

System requirements

- PC or Notebook with a PCMCIA CardBus II Slot
- Windows 98SE/ME/2000/XP, Mac OS

Package content*

- PCMCIA adapter, CardBus to FireWire
- User manual

*Make sure that product package contains all items before operation. If any item is missing or damaged, then please contact your dealer immediately.

Note:

Follow the general instructions for installation of the adapter. If necessary, read the manual of your computer, or ask a specialist for help.

Driver Installation

Windows 2000/XP

1. Switch on your computer.
2. Insert the card into your CardBus Slot.
3. The driver will be found automatically and installed.
4. You can now start to use the device.



Windows 98SE/ME

1. Switch on your computer.
2. Insert the card into your CardBus Slot.
3. The hardware assistant needs your Windows ME or 98 CD. Put the CD in the CD-ROM drive and click each time "Next".
4. You can now start to use the device.

Support Delock

If you have further questions, please contact our customer support
support@delock.de / www.delock.com or phone
0700 - DELOCKGE (0700 - 335 625 43).

You can contact our service hotline during the following times:

Mon – Fri: 9:00 – 17:30 pm charge 0,12 € / min*

* A connection fee applies according to fee schedule of Deutsche Telekom AG or your local telephone provider.

All callers outside of Germany dial please 00493081789324

You can find current product information on our homepage:
www.delock.com

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this user manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Delock.